

Lofty's 'A' Class Ignition Module Cover Removal Tool

Thank you for purchasing the above tool which if looked after will out last the life of your car!

The tools made up of two components, please note that one leg is longer than the other three by design and has been notched. See fig 1 **A**
This leg must go to the upper right hand recess hole in the cover, when sited the stepped toes will be away from the cover. This rule also applies when locating the lower tool. **Stepped toes away from the cover** See fig 1 **B**

Use

Locate the lower tool in the cover guided by the lines on the cover,
locate the upper tool in the cover ensuring the toes are fully housed.
See fig 2. The lugs you are displacing are shown in Fig 3 only a small amount of expansion of the cover is reqd.

Using the grip handles gently close together, this action will have the effect of opening the back of the cover allowing it to be removed from the ignition module. Coils

It is strongly recommended that the tools be used for replacing the cover as the plastic will become brittle when cold or aged.

When replacing the cover, locate the tools in the cover, slightly grip to hold the cover, ensure that the left hand side is not fouled on the angled bracket. Locate cover fully before releasing the grips.
Check the security of the cover when complete.

For further details on changing your plugs go to :-


<http://homepage.ntlworld./albert.rowe/mypage.29.htm>

For further copies of Instruction this doc:-

<http://homepage.ntlworld.com/albert.rowe/mypage.99.htm>

If you are **Happy with the performance of the tool?**

Tell the World . If your Not tell Me!

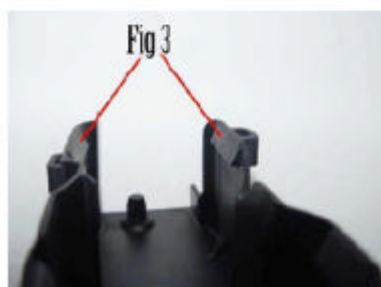

Loffties@ntlworld.com

